



## USER GUIDE

WINE CI8 • CI8 S • CI8 SR



DEFYING  
CONVENTION

# INSTRUCTIONS FOR USE

## TABLE OF CONTENTS

<b>Introduction</b> : “From Vineyard to wine” .....	Page 3
<b>1. INSTALLATION OF THE WINEMASTER</b> .....	<b>Page 4</b>
1.1. EVACUATION ROOM .....	Page 4
1.2. THE CELLAR EQUIPMENT .....	Page 4
1.2.1. INSULATION .....	Page 4
1.2.2. INSULATION WALLS AND CELLING .....	Page 5
1.2.3. FLOOR INSULATION .....	Page 5
1.2.4. THE DOOR .....	Page 6
1.2.5. INSULATION OF OTHER ITEMS .....	Page 6
<b>2. INSTALLING THE WINEMASTER AIR-CONDITIONER</b> .....	<b>Page 6</b>
2.1. PIERCING THE WALL .....	Page 7
2.2. SEALING AND LEVELLING THE WOODEN FRAME .....	Page 7
2.3. INSTALLING THE AIR-CONDITIONER .....	Page 7
2.3.1. REMOVE THE PLASTIC COVER .....	Page 7
2.3.2. FITTING THE DEVICE INTO THE FRAME .....	Page 8
2.3.3. INSTALLING THE WATER DRAINAGE SYSTEM .....	Page 8
<b>3. USING THE WINEMASTER AIR-CONDITIONER</b> .....	<b>Page 9</b>
3.1. STARTING UP MODEL WINE C18 .....	Page 9
3.1.1. CONNECTING THE AIR-CONDITIONER .....	Page 9
3.1.2. SETTING THE TEMPERATURE .....	Page 9
3.2. STARTING UP MODEL WINE C18S(R) (With heater) .....	Page 9
3.2.1. CONNECTING THE AIR-CONDITIONER .....	Page 9
3.2.2. SETTING THE TEMPERATURE .....	Page 9
3.3. AUTOMATIC DEFROST .....	Page 10
<b>4. MAINTAINING THE WINEMASTER AIR-CONDITIONER</b> .....	<b>Page 10</b>
4.1. CHANGING THE FILTER WITHOUT REMOVING THE COVER .....	Page 10
4.2. CHANGING THE FILTER BY UNSCREWING THE COVER .....	Page 10
<b>5. GUARANTEE</b> .....	<b>Page 11</b>
5.1. TWO-YEAR CONTRACTUAL GUARANTEE .....	Page 11
5.2. TERMS OF APPLICATION OF THE GUARANTEE .....	Page 11
5.3. EXCLUSIONS AND LIMITS OF GUARANTEE .....	Page 11

WARRANTY CERTIFICATE FONDIS : page 12

## ***FROM VINEYARD TO WINE***

***In former times, good french cellars were built to maintain a temperature not exceeding 14 to 16°C in all seasons.***

***Today, this is rarely the case.***

***Nevertheless, a cellar worthy of the name must be protected against wide variations in temperature, be as damp as necessary and ventilated, dark and free of vibration.***

***This is why, for more than fifteen years, we have used the expertise of specialists and enthusiastic amateurs to design, develop, test and produce thousands of air-conditioners destined to help in the storage and ageing of wine.***

***If you follow our advice and respect our recommendations Winemaster will provide the optimal ageing conditions for your treasured wine collection.***

***Don't hesitate to read the installation and operating guide for your FONDIS WINEMASTER cellar air-conditioner.***

***Contact us if you have any questions!***

***So... even if there may be long years to wait before the wine reaches perfection, the great day will come when you face the delicate job of uncorking. Hold the bottle carefully – do not remove the capsule on a level with the mouth – use a good quality tool or lever – remove the cork without shaking the bottle and examine the "mirror"..***

***But that's another story...***

***Attention* : Wait for 24 hours before switching on the air-conditioner.**

**CHARACTERISTICS**

	<b>WINE C18/C18S(R)</b>
Setting the temperature	Preset to 12°C, adjustable between 4 and 15°C*
Maximum outdoor temperature	35°C**
Cooling power	550 W at 15°C **
Electricity supply	230-240 C - 50 Hz - with earth connection ( supplied with 3 m cable )
Electrical power	400 W
Heating power	250 w ( only for C18S(R))

The circuit breaker must be at least 16 Amps.

\* The insulation quality and thickness has to be in accordance with the volume of the cellar and the set temperature.

\*\* The cooling performance is dependant from the outside temperature. Therefore, the set temperature of 12°C for the cellar cannot be maintained if the outside temperature of the cellar is maintained at 35°C.

If the thermal safety functions to often, there is a risk for the condensator and starter to be damaged. In all the cases, it must be avoided that the outside temperature remains at 35°C.


This high temperature should be limited to the summer period.

**1. INSTALLATION OF THE WINEMASTER**

The WINEMASTER is to be built in a wall of the cellar.

If the compressor runs the unit expells air at the outside air outlet at 20°C above the temperature of the air inlet.

This hot air must be cooled in a well aerated room or be expelled outside.

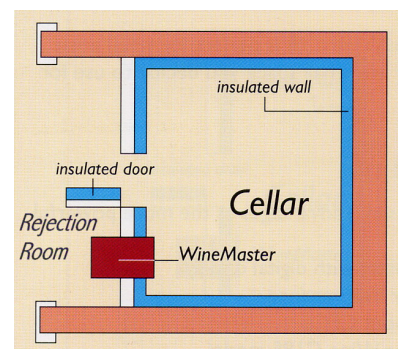**1.1 EVACUATION ROOM**

The “ hot “ side of the WINEMASTER must be inside a room.

Exceptionnaly, an outdoor installation is possible if the ouside part is sheltered and protected from the weather (direct rain, snow, etc... ).

**WARNING**

Starting the compressor at a negative temperature will destroy it. To avoid this problem, you must not change the setting of thermosat if the outside temperature is under zero. This specification doesn't concern the model WINE C18SR equipped with an heating belt on the compressor.

This model should be preferred for outside installation.

The room into which the wine evacuates the hot air must be well ventilated so that the temperature does not exceed 35°C.

A space of at least 10 cm must remain all around the WINEMASTER so that the cover can be removed and that hot air expelled is not aspired again in the air inlet.

The outside of the WINEMASTER must bed integrated in an underground cellar window or in a too little space.

The wall where the device is to built-in must not be more than 22 cm thick. Otherwise, the wall must be cut in a wedgeshape.

**1.2 THE CELLAR EQUIPMENT****1.2.1 INSULATION**

Insulation of the 4 walls, the door, the ceiling and the floor is essential for the Winemaster to work properly. Adequate insulation helps to obtain the stability of the temperature and the humidity.

The board on the next page ( choice of insulation ) can be used to determine the type and the thickness of insulation needed according to the internal volume of the cellar and a cellar temperature of 12°C.

**Insulation continuity :**

Insulating components must be assembled preferably by interlocking panels or glueing the panels together, to ensure perfect continuity of insulation.

This is very important: it prevents heat and humidity entering from the outside which would counter the effects of regulation.

**IMPORTANT**

The validity of the WINEMASTER guarantee depends on the values in the "Choice of insulation" table being strictly respected, for all the cellar walls, including floor and ceiling + door, as well as perfect continuity of insulation.

**CHOICE OF INSULATION**

		<b>MINIMUM THICKNESS OF INSULATION (mm) for 12°C cellar temperature</b>		
		EXPANDED POLYSTYRENE $\lambda = 0.044\text{W/m}^\circ\text{C}$	EXTRUDED POLYSTYRENE $\lambda = 0.030\text{W/m}^\circ\text{C}$	POLYURETHANE FOAM $\lambda = 0.025\text{W/m}^\circ\text{C}$
<b><u>WINE C18 / C18 S(R)</u></b>	CELLAR VOLUME (m <sup>3</sup> )			
	6	40	30	20
	8	50	40	30
	10	60	40	40
	12	80	50	40
	14	90	60	50
	15	100	70	60
	16	110	80	70
	17	120	90	80
	18	130	100	90

### 1.2.2 INSULATING WALLS AND CEILING

The manufacturers propose their insulating panels in several forms:

- insulation alone
- complexes: the insulation is lined with a facing (plaster, mineral...)
- sandwiches: the insulation is lined on each side with a wooden or plaster panel.

The panel facing is important: *it protects the insulation from shocks and guarantees long life.*

Do not use mineral fibre insulation (Glasswool, stonewool) because it stores humidity !

### Protection against rodents

Some insulating materials are damaged by rodents (mice, rats...). It is therefore essential to make sure that the walls of the cellar do not contain holes which would allow rodents access to the insulation. This insulation must be lined, on the inner surface of the cellar, with a protective facing. Polyurethane insulation, because of its chemical composition, is not attacked by rodents.

### 1.2.3 FLOOR INSULATION

The cellar floor must be able to support shelves and the wine stored on them. You should therefore choose an insulating material with adequate compression resistance for this part. Manufacturers recommend appropriate insulation or materials designed specifically for floor insulation, in their documentation.

Puncture resistance (feet of shelves in particular) is provided:

- by using *"complex" insulation panels* lined, on the upper surface, with a strong panel.
- by *facing the insulation with a panel of chipboard* (approx. 15 mm thick), or any other suitable covering (plaster and slab, for example).

### 1.2.4 THE DOOR

It is part of the continuity of insulation.

There are two possible solutions:


- to insulate the existing door using the same type as insulation as was used for the cellar walls. Insert a seal such as foam, between the door panel and the frame, all around the edge.
- use a FONDIS ISOTHERMAL DOOR, lined with polyurethane foam. It includes a seal around its periphery, with a magnetic closure.

### 1.2.5 INSULATION OF OTHER ITEMS

A fridge or another appliance producing heat must not be placed inside the cellar. For example, any hot water pipe going through the cellar must also be insulated.

## **2. INSTALLING THE WINEMASTER AIR-CONDITIONER**

### Tools

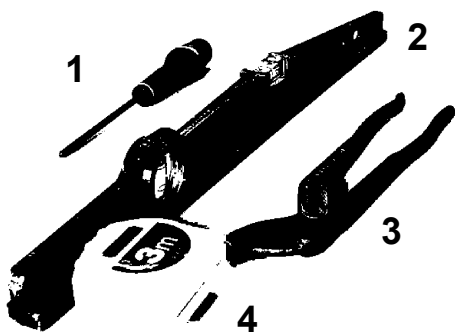

1. PHILIPS SCREWDRIVER PZ 2

2. WATER LEVEL


3. UNIVERSAL WRENCH

4. METER TAPE

## 2.1 PIERCING THE WALL

Cut the wall as necessary to fit the wooden frame. The outer dimension of the wooden frame is 514 mm long by 374 mm high. Be careful to leave at least 10 cm room below the ceiling, both in the cellar and outside.


## 2.2 SEALING AND LEVELLING THE WOODEN FRAME

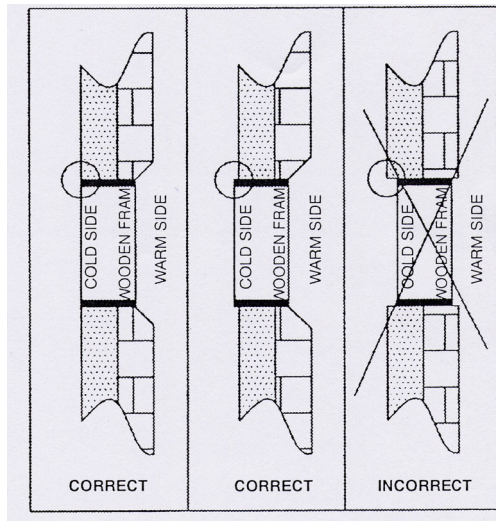


Seal the wooden frame so that it is flush with the inside of the cellar wall. If the wall is thicker than the wooden frame, cut a wedge-shape in the wall, as shown in the diagram above.

The joint between the wooden frame and the insulation must be filled (with polyurethane foam, for example), to ensure continuity of insulation. **WARNING, DO NOT PUT POLYURETHANE FOAM BETWEEN THE WINEMASTER AND THE WOODEN FRAME, THE WINEMASTER MUST BE REMOVABLE.**

The wooden frame must be level :  
**the widest side should be horizontal**




**CORRECT**

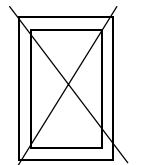

**INCORRECT**

## 2.3 INSTALLING THE AIR-CONDITIONER

### 2.3.1 REMOVE THE PLASTIC COVER

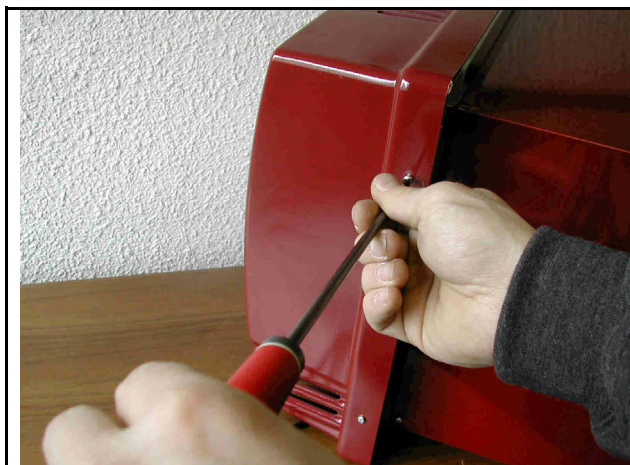


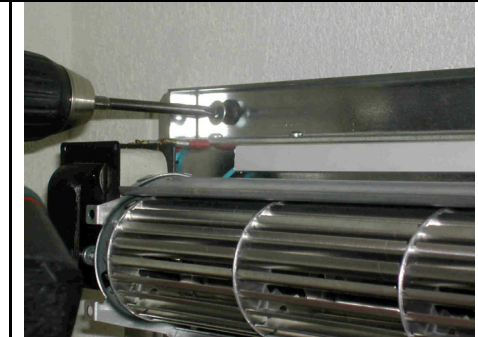
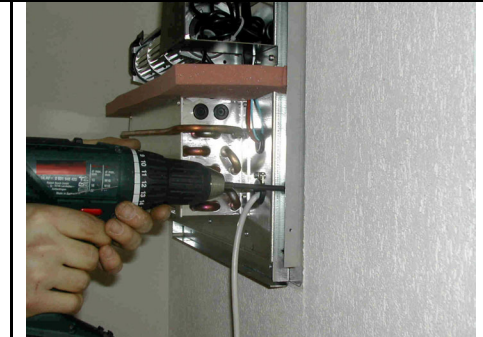
Unscrew the 2 screws on each side of the Winemaster



Remove the cover





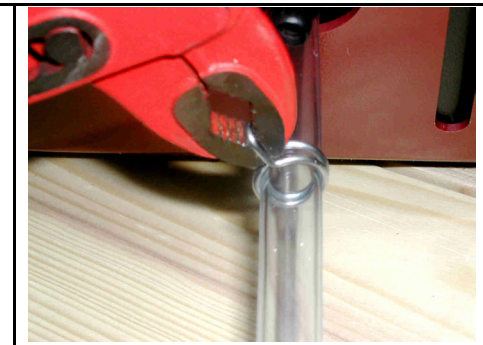

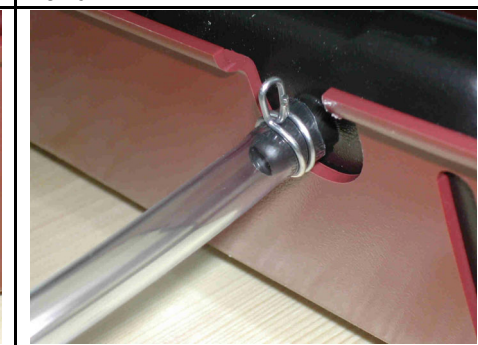
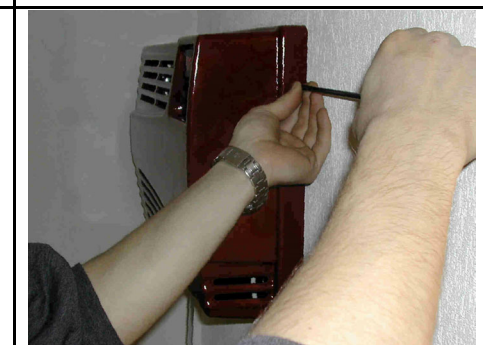
### 2.3.2 FITTING THE DEVICE INTO THE FRAME

		
Position the air-conditioner in the frame from inside the cellar	Tighten the two screw/washer units at the top	Tighten the two screw/washer units on the side

Check the seal between the wooden frame and the Winemaster. The electrical connection cable and the PVC condensate tube are situated inside the cellar.

### 2.3.3 INSTALLING THE WATER DRAINAGE SYSTEM

The container for collecting condensate is glued onto the cover. You are recommended to attach the pipe when the cover is off.

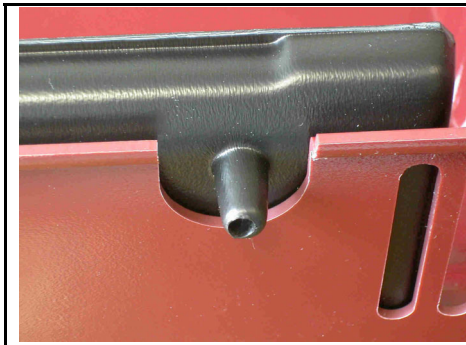		
Flow from the condensate collection tray.	Push the PVC pipe on, being careful to support the tray with the other hand.	Place the collar as close to the cover as possible for better adhesion.
		
Tighten the collar using a universal wrench or pliers.	The pipe is well attached.	Refit the cover on the Winemaster and tighten the 4 screws

### **Important :**

*Wait for 24 hours before switching on the air-conditioner.*



### 3. USING THE WINEMASTER AIR-CONDITIONER

The thermostat indicates the temperature in the wine cellar with a precision of 2°C.

A temperature change of the air does not mean the same change of temperature of the liquid due to the thermal capacity of the liquid.

The temperature is set at 12° C in the factory. During installation the set temperature must be controlled and adjusted as shown in next paragraph if necessary (paragraph 3.1.2 & 3.2.2 ).

#### 3.1 STARTING UP MODEL WINE C18

##### 3.1.1. CONNECTING THE AIR-CONDITIONER

When you plug it into the electrical socket, the air conditioner starts up immediately.

If the temperature in the cellar is higher than the thermostat setting, the compressor starts up immediately. If the temperature in the cellar corresponds to the setting, only the cellar fan which functions permanently will start.

##### 3.1.2 SETTING THE TEMPERATURE



The temperature is set on the thermostat as follows:


Press buttons 1 and 2 at the same time until the set temperature is flashing. Use button 1 to increase and button 2 to decrease the set temperature. When the setting is right, press both buttons at the same time to validate it.



#### 3.2 STARTING UP MODEL WINE C18S(R) (WITH HEATER)




##### 3.2.1. CONNECTING THE AIR-CONDITIONER

When you plug it into the electrical socket. The fan in the cellar starts up immediately. The compressor may not come on until 2 minutes later if the temperature of the cellar is higher than the set temperature. If the temperature of the cellar is the same as the setting on the thermostat, the compressor will not come on.

##### 3.2.2 SETTING THE TEMPERATURE

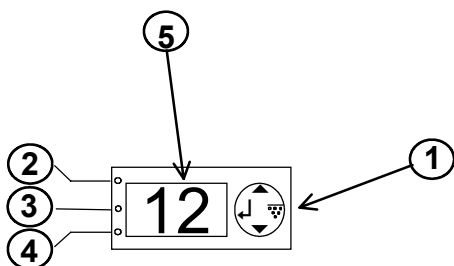

The thermostat is equipped with a joystick on the right hand side (**ref. 1**) which can be used to change the setting. To change the setting, simply press on the symbol  for 5 seconds. The display (**ref. 5**) then displays **SET**. Press the symbol  once again briefly.

The set temperature is displayed. To increase it, press the up arrow . To reduce it press the down arrow . When The temperature on the display is correct, confirm by pressing to symbol  until it shows again **SET**.

**Diode 2** indicates that the device is defrosting.

**Diode 3** indicates that it is in heating mode.

**Diode 4** indicates that the compressor is running. When there is no diode lit, the cellar temperature is close to the set temperature.

After changing a setting, because of a fitting which prevents it from starting up too frequently, the compressor will only start up after a few minutes.

### 3.3 AUTOMATIC DEFROST

The program of the thermostat will run an automatic defrost time several times a day. During this position, the compressor cannot start. Only the fan in the cellar can function. The condensate water produced during this period will be evacuated through the tube

## **4. MAINTAINING THE WINEMASTER AIR-CONDITIONER**

### THE DUST FILTER



It is essential to replace the dust filter, which is outside the cellar, as soon as necessary and at least once a year. If it is clogged, the air-conditioner may be seriously damaged.

#### 4.1 CHANGING THE FILTER WITHOUT REMOVING THE COVER.



If the wall is not too thick, you don't need to remove the cover in order to change the dust filter. Raise it at the notch under the air-conditioner and remove it from underneath. Repeat this action in reverse order to replace it.

#### 4.2 CHANGING THE FILTER BY UNSCREWING THE COVER

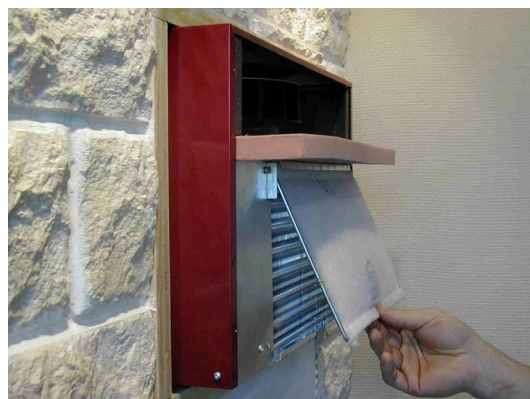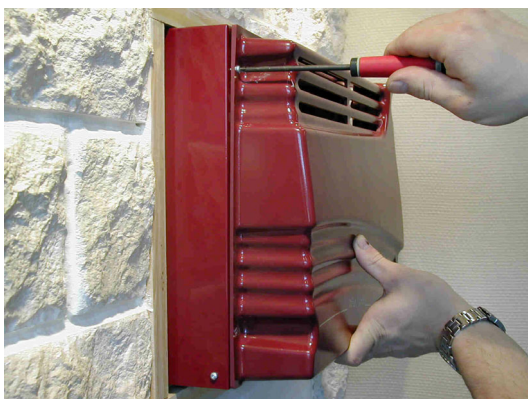

If the wall is thicker than the air-conditioner, the bevel in the partition is not big enough to allow the filter to be removed. In this case you must unscrew the four screws holding the cover in place and then lift the filter out.

## **5. GUARANTEE**

### **5.1. TWO-YEAR CONTRACTUAL GUARANTEE**

The air-conditioner is guaranteed for two years against manufacturing defects.

During the contractual guarantee period, FONDIS will replace any part recognized as defective, following the intervention of a qualified representative.

In the event of an electrical breakdown, FONDIS will replace any part recognized as defective following the intervention of a qualified stockist or his representative.

In the event of cooling system breakdown, FONDIS can ask for the part to be returned for repair following the intervention of a qualified representative. The equipment will be packed and held available for the FONDIS carrier to collect it.

Operations and returns must be made with the written agreement of FONDIS after sales service.

### **5.2. TERMS OF APPLICATION OF THE GUARANTEE**

The contractual guarantee applies to all devices installed and used in accordance with the "Installation and operating guide". Application of the contractual guarantee depends on the guarantee card at the back of the booklet being returned within 15 days of purchase.

### **5.3 EXCLUSIONS AND LIMITS OF GUARANTEE**

The guarantee is refused in the following cases:

- *The cellar and installation have not been insulated in accordance with this guide.*
- *The damage is due to negligence, poor maintenance, defective or inappropriate use of the WINEMASTER.*
- *Part exchanges or replacements under guarantee will not have the effect of extending it.*

FONDIS SA cannot be held responsible, under any circumstances, for the direct or indirect consequences of the air-conditioner's failure to function. The guarantee is limited only to the product supplied by FONDIS SA.



## WARRANTY CERTIFICATE FONDIS

In order to validate your 2 year contractual warranty in accordance with the specified warranty conditions stated in the WineMaster user manual, **please complete and return this warranty certificate within 15 days from the date of purchase to the following address:**

### WINE CORNER

Unit 6, Harworth Enterprise Park, Brunel Industrial Estate, Harworth, South Yorkshire DN11 8SG

Model: \_\_\_\_\_

Serial number: \_\_\_\_\_

Purchase date: \_\_\_\_\_

Installation date: \_\_\_\_\_

Installer: \_\_\_\_\_

The volume of your wine cellar in meters squared: \_\_\_\_\_

POINT OF SALE STAMP

FIRST NAME \_\_\_\_\_ LAST NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

POSTAL CODE \_\_\_\_\_ CITY \_\_\_\_\_ COUNTRY \_\_\_\_\_

***In the following section, please specify the insulation characteristics of your cellar.***

	Type of material and thickness	Type of insulation and thickness
Wall		
Floor		
Ceiling		
Door		

How did you learn about FONDIS WineMaster cellar air conditioning systems ?

☐ through a trade show

☐ through a vendor

☐ through an editorial article

☐ through an advertisement

☐ other (please specify) \_\_\_\_\_